

Wireless Caregiver Pager User Manual

Introduction

Wireless caregiver pager, integrating with 32 songs, adopts advanced wireless transceiver technology, strong microcomputer control system and high-quality voice processing technology with stable and reliable performance. Receivers and transmitters are paired wirelessly by code. The caregiver pager can be applied to villa, club, recreation center, hotel, home, office building, meeting room etc.

Features

1. 32 available tones
2. 4 adjustable volume levels
3. Memory function (When the receiver power on, the tone stays the same with the one being set last time)
4. Different tones can be set to different transmitters

Operation Guide

Button Mode : Short press: The time for the key pressed <3S
Long press: The time for the key pressed >3S

Instruction

Getting Started

Plug the receiver into the AC outlet.

The receiver will beep once and LED light will flash in each color circularly.

Operating Receiver

Changing the Tone:

Press "🎵" button to cycle through the available tones. To reverse the order, press and hold "🎵" button (Note: When choosing a tone for receiver, wait for 3s after the tone is finished and press "🎵" button, then the tone played is currently set).

Changing the Volume:

Press "🔊" button to cycle volume settings (Note: The volume changes to the largest automatically every time when the receiver is power on).

Adding a Transmitter

Adding a normal transmitter:

1. Press and hold "🔊" button.
The receiver will beep once and the LED light will be lit up.
2. Trigger a transmitter to send a signal to the receiver.

The receiver beeps twice and the LED light flashes twice, showing the transmitter is added successfully. The receiver beeps once and the LED light flashes once, showing the transmitter has been added before. The receiver beeps thrice and the LED light flashes thrice, showing no transmitter can be added any more.

Adding a transmitter with fixed tone:

1. Choose the desired tone
2. Press and hold "🎵" and "🔊" buttons
The receiver will beep once and the LED light will be lit up.
3. Trigger a transmitter to send a signal to the receiver.

The receiver beeps twice and the LED light flashes twice, showing the transmitter is added successfully. The receiver beeps once and the LED light flashes once, showing the transmitter has been added before. The receiver beeps thrice and the LED light flashes thrice, showing no transmitter can be added any more.

Note: The receiver will exit the status of adding transmitters if being pressed any button or taken no action in 20s. Up to 20 transmitters can be added.

Restoring factory defaults

1. Plug the receiver
2. Press and hold "🎵" and "<)" buttons. The receiver will beep once.
3. Release the button. The tone will be reset to the first one and the volume will be reset to the largest. The transmitter will not be removed.

Delete pairing method

1. Unplug the receiver.
2. Press and hold "🔊" button, plug in receiver. (Do not release "🔊" button until the receiver beeps slowly and continuously and the LED light will flash ten times.) Then receiver will give a series of fast beeps and the LED light will give fast flashes as well.
Now it is reset. All transmitters are removed.

Technical Parameters

■ Power: 100~240V 50~60Hz AC

For any product issue, we sincerely, appreciate if you could contact us.

Email: sales@singcall.com